




# ***IND-110 Drum Warmer***

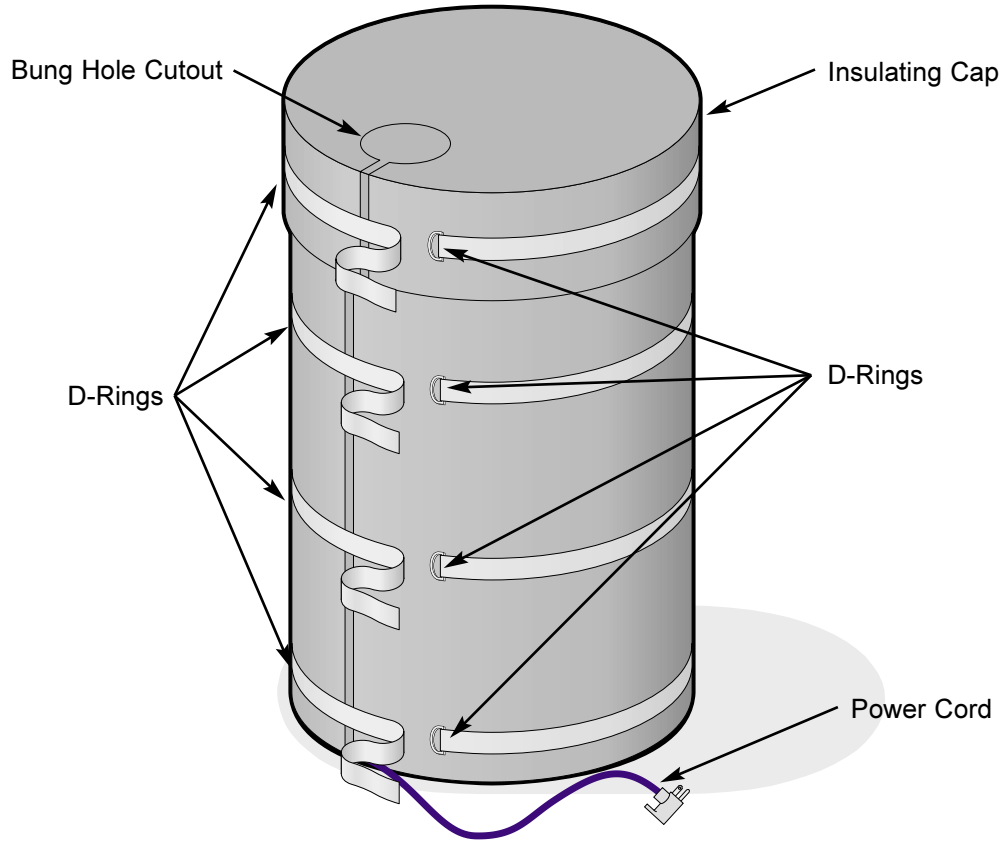

## **Installation Manual**



# INSTALLATION NOTES

## READ THESE NOTICES BEFORE INSTALLING THE FLEXWATT TANK WARMING SYSTEM.

- Metal drums must be properly grounded before operating the system.
- For best results, place the drum on an insulating surface - this will help avoid excessive heat loss and potential damage to the stored material.
- Do not operate drum warmer when not attached to a drum or when drum is empty.
- Do Not run the drum warmer over fittings, pipes, insulation or anything other than the drum wall itself.
- Do Not fold, overlap or wrinkle the heating element panels.
- Do Not cut the heating element panels or otherwise alter their length.
- Note that the drum warmer does not have a power switch - to turn off the system, unplug the cord.
- The thermostat has been preset at the factory and can not be reset. Do not attempt to change the set point of the thermostat as this may result in damage to the thermostat, the drum warmer and/or the drum contents. The thermostat set-point is noted on the power cord.
- This drum warmer is specifically manufactured for use on 55 gallon drums (23"d by 34"t). Do not use on any other size drum.

## INSTALLATION

- Wrap the drum warmer around the drum, strap side out. The cord should exit the blanket on the bottom.
- Using the double-D rings, secure the drum warmer in place.
- Place the insulating cap on the drum and secure with the double-D rings.

## USING THE BUNG HOLE ACCESS

- If you need access to the bung hole on your drum while the drum warmer is in place, simply cut out the stitched in hole on the top of the insulating cap.
- Cut only to the inside of the stitching to avoid fraying the cap.

## OPERATE THE DRUM WARMER

Since the thermostat was preset at the factory, operating the drum warmer is as simple as plugging it in.

## ELECTRICAL SPECIFICATIONS

Voltage: 120 Volts      Power: 240 Watts      Current: 2 amps

Copyright © 2003 CalorIQ, Ltd.  
All rights reserved.  
Printed in USA

### CalorIQ, Ltd.

2380 Cranberry Highway  
West Wareham, MA 02576  
USA

+1 508.291.4224 voice

+1 800.922.9276

+1 508.291.2299 fax

www.calorique.com

info@calorique.com